

Iolite Vaporizer – Trouble Shooting Tips

If you are experiencing any problems with your Iolite Portable Vaporizer please follow the following steps.

Venting the Iolite Vaporizer

1. Make sure the unit is off, the switch should be at 0. Turn the unit upside down and point away from your body.
2. Using the small end of the hand tool, depress the gas valve and let all the gas dispel *ensuring to keep hands clear of liquid gas spraying from the valve*, this may take up to or more than 30 seconds.

Refilling the Iolite Vaporizer with Butane

1. Hold the Iolite in one hand and with your other hand hold the butane can upside down.
2. Press down gently but firmly. Filling should take between 2- 5 seconds; as soon as it “overflows” the Iolite is full.
3. You will be able to feel the difference in your Iolite when it's full (slightly heavier and you can hear a little slosh inside the unit.) The Iolite will also be cold to the touch.
4. Do not try to use the Iolite right away. Leave the Iolite for at least 5 minutes before attempting ignition.

Using the Iolite Vaporizer

5. Once filled, turn the unit on by switching the "On" button from 0 to 1.
6. Slowly press the Piezo (Igniter) button while looking for the amber light to come on.
7. Once the amber light appears, you will begin to hear a hissing sound every 45 seconds. That sound is your Iolite releasing the Butane Gas, which is completely harmless.
8. It takes approximately 2-3 minutes for the Iolite Vaporizer to reach the desired temperature for Vaporizing.
9. Lightly pack your herbs into the Herbal Chamber and re-attach the mouthpiece.
10. Wait approximately 15 seconds, then begin slowly and lightly drawing the vapor in your mouth. When exhaling, you should see a fine mist of vapor, not a cloud of smoke.
11. When finished vaporizing, switch the unit off. It's normal to hear the hissing noise for another 2 minutes after the unit has been turned off.

Note: VaporNation recommends refined premium butane (5X) for increased efficiency.