

Vapir NO2 Vaporizer Instructions

First, pre-grind herbal blend – this will allow the hot air to flow throughout the blend and produce the best vapor.

Next, set the unit to your desired temperature utilizing the **+** and **-** buttons temperature buttons. The best vaporizing temperature is approximately 365° Fahrenheit, give or take 20° depending on the moisture content of the specific herbs you are using. Sometimes you may only need a lower temperature around 355° and sometimes you may need to go higher to about 375-385°, but again this depends on the herb. If you go above 385° you run the risk of heating the herb too much and it almost becomes like regular smoking because the vapor is so thick.

Once you have set your desired temperature, engage the heating element by pressing the Heat Button (Red Button located beneath the LCD Temperature Display) and a **Red** LED light will illuminate above the LCD Temperature Display indicating the heating process has begun. Note that when the unit has reached the desired temperature the **Red** LED will change to a **Green** LED, indicating the unit is fully heated and ready for usage. When the temperature drops below the preset temperature, the **Green** LED will revert back to a **Red** LED indicating that unit is re-heating to reach your desired temperature. This is normal and will occur during usage.